

# User Manual

Model Number:

**W64 / W65 / W66 / W67 / W68 / W69**



## I. Product Overview

1. Week Day
2. RESET Button
3. Hour
4. PM Indicator

5. Mode Button

6. Minute

7. Date

8. START Button

9. Hourly Chime Indicator

10. Alarm Indicator

11. Light Button

12. Second

## II. Local Time Setup

2.1 In the local time display mode, hold down the RESET button till you see the seconds digit is blinking, then press the START button to clear the seconds digit or you could skip to the next step.

2.2 Press the MODE button once, you will see the minute digit starts blinking, then press the START button to set the minute.

2.3 Press the MODE button once again, you will see the hour digit starts blinking, then press the START button to set the hour.

2.4 Press the MODE button once again, you will see the hour format digit starts blinking, then press the START button to choose 12 or 24 hours format.

2.5 Press the MODE button once again, you will see the year digit starts blinking, then press the START button to set the year.

2.6 Press the MODE button once again, you will see the month digit starts blinking, then press the START button to set the month.

2.7 Press the MODE button once again, you will see the date digit starts blinking, then press the START button to set the date.

2.8 Press the RESET button once to save all the settings, the watch will back to the local time display mode.

### III. Stopwatch Mode

3.1 In the local time display mode, press the MODE button twice to enter into stopwatch mode.

3.2 Press the START button to start timing.

3.3 Press the START button again to stop timing.

3.4 Press the RESET button to clear.

3.5 Press the MODE button once to exit the stopwatch mode.

**Notes:**

**1. The stopwatch timing range is 0'00"00 to 23:59'59".**

**2. If you don't stop the timing, the stopwatch will continue to timing and start timing from 0'0"00 even the timing is over 24 hours and you have exited the stopwatch mode.**

## **IV. Alarm**

### **4.1 Set an alarm**

4.1.1 In the local time display mode, press the MODE button once to enter into alarm setting mode.

4.1.2 Hold down the RESET button till you see the hour digit is blinking, then press the START button to set the hour.

4.1.3 Press the MODE button once, you will see the minute digit starts blinking, then press the START button to set the minute.

4.1.4 Press the RESET button once to save the setting.

4.1.5 Press the MODE button once to exit the alarm setting mode.

## 4.2 Turn On/Off Alarm

In the alarm setting mode, press the START button to turn on or turn off the alarm.

### **Notes:**

- 1. The alarm sound would last for 20 seconds.**
- 2. You could press any buttons on the watch to stop the alarm sound.**
- 3. The alarm is defaulted set for every single day.**

## V. Turn On/Off Hourly Chime Function

In the alarm setting mode, press the START button to turn on/off the hourly chime function.

## VI. Timer Countdown

6.1 In the local time display mode, press the MODE button for 3 times to enter into timer countdown mode.

6.2 Hold down the RESET button till you see the hour digit is blinking, then press the START button to set the hour.

6.3 Press the MODE button once, you will see the minute digit starts blinking, then press the START button to set the minute.

6.4 Press the MODE button once again, you will see the seconds digit starts blinking, then press the START button to set the seconds.

6.5 Press the RESET button once to save the setting.

6.6 Press the START button to start count down.

6.7 Press the START button again to stop count down.

6.8 Press the MODE button once to exit the timer countdown.

**Notes:**

- 1. This watch would start sounds countdown 10 seconds before the countdown is ended.**
- 2. When the countdown is ended, the watch will sound for 10 seconds and then return to the start.**

## VII. Back Light

Press the LIGHT button to turn on the electro luminescent backlight. The backlight will be turned off automatically in about 3 seconds.

## VIII. Time Setup for the Other Time Zone

8.1 In the local time display mode, press the START button once to switch to the other time zone display mode.

8.2 Hold down the RESET button till you see the minute digit is blinking, then press the START button to set the minute.

8.3 Press the MODE button once, you will see the hour digit starts blinking, then press the START button to set the hour.

8.4 Press the RESET button to save the setting.

8.5 Press the START button once to return to the local time display mode.

## IX. Check the Current Time in the Other Time Zone

In the local time display mode, press the START button once to check the current time in the other time zone