User Guide

Model Number: W17-Y





- 1. Set Button
- 2. Week
- 3. Date
- 4. Minute
- 5. PM Indicator

- 6. Hour
- 7. Mode Button
- 8. Chronograph Indicator
- 9. Countdown Timer Indicator
- 10. Adjust Button

- 11. Time Adjustment Knob
- 12. Seconds
- 13. Hourly Chime Indicator

- 14. Light Button
- 15. Alarm Indicator



2.1 Seconds

In the Timekeeping Mode, hold down "SET" button until the seconds setting starts to flash, which indicates the setting screen. While it is flashing, press the "ADJ" button to reset the seconds to zero.



2.2 Hour

Press the "Mode" button to move the flashing to the hour setting. While it is flashing, use the "ADJ" button to change it.




2.3 Minutes

Press the "Mode" button to move the flashing to the minute setting. While it is flashing, use the "ADJ" button to change it.



2.4 Month

Press the "Mode" button to move the flashing to the month setting. While it is flashing, use the "ADJ" button to change it.

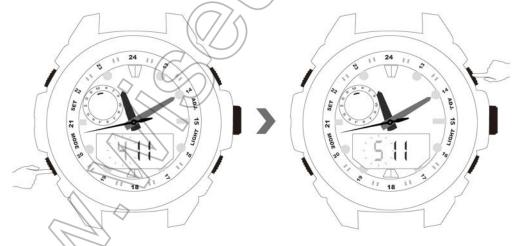

2.5 Date

Press the "Mode" button to move the flashing to the date setting. While it is flashing, use the "ADJ" button to change it.




Press the "Mode" button to move the flashing to the week setting. While it is flashing, use the "ADJ" button to change it.



2.7 12/24 Hour Format

Press the "Mode" button to move the flashing to the 12/24 hour format setting. While it is flashing, use the "ADJ" button to toggle between 12-huor and 24-hour timekeeping.

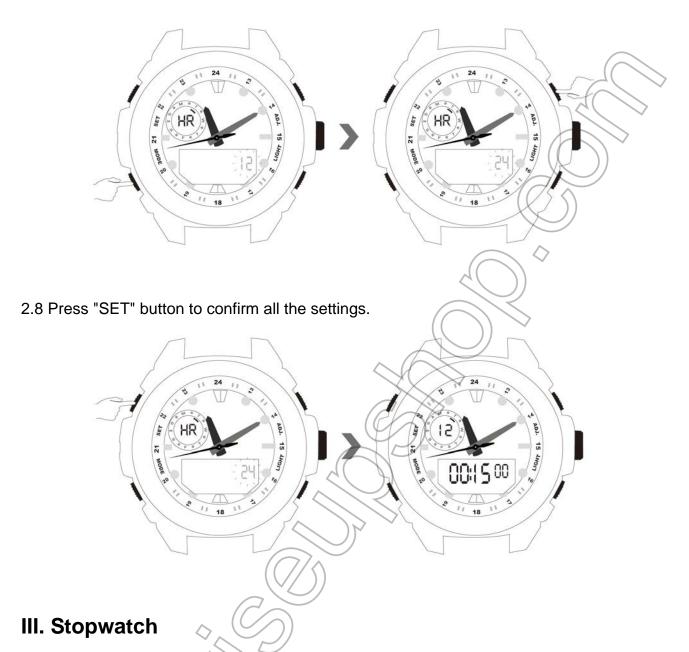

3.1 All of the operations in this section are performed in the SP Mode(Stopwatch Mode), which you enter by pressing "Mode" button.



3.2 Press the "ADJ" button while in the Stopwatch Mode to start the stopwatch.



3.3 Press the "ADJ" button while a stopwatch operation is in progress to pause it.



3.4 Press the "SET" button to reset stopwatch to zero.



4.1 Alarm Clock Time Setting

4.1.1 All of the operations in this section are performed in the AL Mode(Alarm Mode), which you enter by pressing "Mode" button twice.



4.1.2 Hold down "SET" button until the hour setting of the alarm time starts to flash, which indicates the setting screen. While it is flashing, use the "ADJ" button to change it.



4.1.3 Press the "Mode" button to move the flashing to the minute setting. While it is flashing, use the "ADJ" button to change it.



4.1.4 Press the "Mode" button to move the flashing to "L1/L2". While it is flashing, press "ADJ" button to scroll through the alarm screens until the one whose time you want to set is displayed.



<Note>: £ / displays the alarm clock for the current time; £2 displays the alarm clock for the other time zone.

4.1.5 Press "SET" button to confirm all the settings.



4.2 Alarm Clock Turn On/ Turn OFF

In the Alarm Mode, press the "ADJ" button to toggle it on and off. When the watch displays as below, it indicates the alarm clock is turned on.



<Note>: To stop the alarm tone after it starts to sound, press any button.

4.3 Hourly Chime Function Turn ON/ OFF

4.3.1 In the Alarm Mode, press the "ADJ" button to toggle it on and off. When the watch displays as below, it indicates the hourly chime function is turned on.



V. Countdown Timer

5.1 All of the operations in this section are performed in the TR Mode(Countdown Timer Mode), which you enter by pressing "Mode" button three times.



5.2 Countdown Timer Time-setting

5.2.1 Hold down "SET" button until the hour setting of the countdown start time starts to flash, which indicates the setting screen. While it is flashing, use the "ADJ" button to change it.



5.2.2 Press the "Mode" button to move the flashing to the minute setting. While it is flashing, use the "ADJ" button to change it.



5.2.3 Press the "Mode" button again to move the flashing to the seconds setting. While it is flashing, use the "ADJ" button to change it.



5.2.4 Press "SET" button to confirm all the settings.



5.3 To use the countdown timer

5.3.1 Press the "ADJ" button while in the Countdown Timer Mode to start the countdown timer.



5.3.2 Press the "ADJ" button while a countdown operation is in progress to pause it.



5.3.3 Press "Mode" button to exit the setting screen.



VI. Back Light

In any mode, press the "LIGHT" button to turn on back light.



VII. Dual Time Setting


7.1 All of the operations in this section are performed in the T2 Mode(Dual Time Mode), which you enter by pressing "Mode" button four times.



7.2 Hold down "SET" button until the hour setting starts to flash, which indicates the setting screen. While it is flashing, use the "ADJ" button to change it.



7.3 Press the "Mode" button to move the flashing to the minute setting. While it is flashing, use the "ADJ" button to change it.

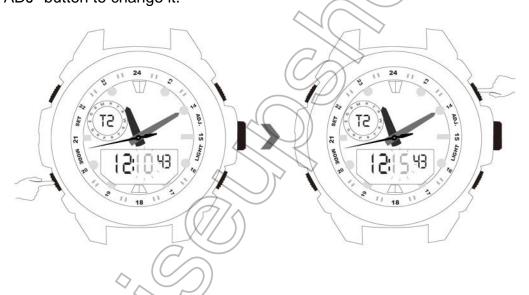

7.4 Press "SET" button to confirm all the settings.

